




# **TRB142**






# **HARDWARE**


# **FRONT VIEW**

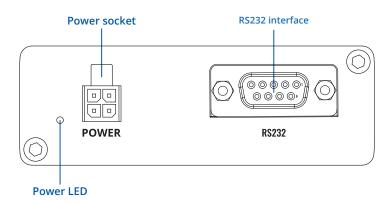

#### **BACK VIEW**

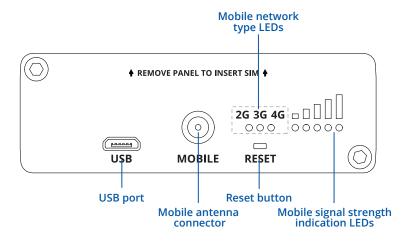


# **POWER SOCKET PINOUT**

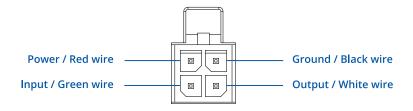

# **DB9 CONNECTOR PINOUT**

- 1. Not used.
- 2. Received Data (RX) output.
- 3. Transmitted data (TX) input.
- 4. Not used.
- 5. Ground (GND).
- 6. Not used.
- 7. Request data to send (RTS) input.
- 8. Clear data to send (CTS) output.
- 9. Not used.

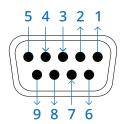



# **FEATURES**

# **MOBILE**

Mobile module	4G (LTE) – Cat 1 up to 10 Mbps, 3G – Up to 42 Mbps, 2G – Up to 236.8 kbps
Bridge	Direct connection (bridge) between mobile ISP and device on LAN
Status	Signal strength (RSSI), SINR, RSRP, RSRQ, EC/IO, RSCP Bytes sent/received
SMS/Call	SMS status, SMS configuration, Call utilities

# **NETWORK**

Network protocols	TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, SSL v3, TLS, SSH, DHCP, SNMP, MQTT
Brige	Static routing
Connection monitoring	Ping Reboot, Periodic Reboot, LCP and ICMP for link inspection, Wget
Firewall	Port forwards, traffic rules, custom rules
DHCP	Static and dynamic IP allocation
QoS / Smart Queue Management (SQM) (planned)	Traffic priority queuing by source/destination, service, protocol or port
DHCP	Supported >25 service providers, others can be configured manually

#### **SECURITY**

Authentication	Pre-shared key, digital certificates, X.509 certificates
Firewall	Pre-configured firewall rules can be enabled via the WebUI, unlimited firewall configuration via CLI; NAT; NAT-T
Access control	Flexible access control of TCP, UDP, ICMP packets, MAC address filter

# **VPN**

OpenVPN	Multiple clients and a server can run simultaneously, 12 encryption methods
OpenVPN Encryption	DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC, CAST5-CBC, RC2-64-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC
IPsec	IKEv1, IKEv2, supports up to 5 x VPN IPsec tunnels (instances), with 5 encryption methods (DES, 3DES, AES128, AES192, AES256)
GRE	GRE tunnel
PPTP, L2TP	Client/Server services can run simultaneously

#### **MONITORING & MANAGEMENT**

WEB UI	HTTP/HTTPS, status, configuration, FW update, CLI, troubleshoot, system log, kernel log
FOTA	Firmware update from sever, automatic notification
SSH	SSH (v1, v2)
SMS	SMS status, SMS configuration
MQTT	MQTT Broker, MQTT publisher
JSON-RPC	Management API over HTTP/HTTPS
Modbus	Modbus TCP status/control
RMS	Teltonika Remote Management System (RMS)

#### **SYSTEM CHARACTERISTICS**

CPU	ARM Cortex-A7 1.2 GHz CPU
RAM	128 MB (50 MB available for userspace)
FLASH memory	512 MB (200 MB available for userspace)

#### **SERIAL COMMUNICATION MODES**

Modes Console, OverIP, Modem (Full or Partial control), Modbus RTU master, Modbus gateway, NTRIP client



# MODBUS TCP SLAVE

ID filtering	Respond to one ID in range [1;255] or any
Allow remote access	Allow access through WAN
Custom registers	Modbus TCP custom register block, which allows to read/write to a file inside the router, and can be used to extend Modbus TCP slave functionality

# MODBUS TCP SLAVE

Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)

# **MODBUS RTU MASTER**

Suported baud rates	From 300 to 115200
Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)
Number of data bits	From 5 to 8
Number of stop bits	1 or 2
Parity	None, Even, Odd
Flow control	None, RTS/CTS, Xon/Xoff

#### **MODBUS DATA TO SERVER**

Protocol HTTP(S), MQTT

# FIRMWARE / CONFIGURATION

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup, restore point
FOTA	Update FW/configuration from server
RMS	Update FW/configuration for multiple devices
Keep settings	Update FW without losing current configuration

# FIRMWARE CUSTOMIZATION

Operating system	RutOS (OpenWrt based Linux OS)
Supported languages	Busybox shell, Lua, C, C++
Development tools	SDK package with build environment provided

# INPUT/OUTPUT

Configurable I/O	2 x Digital Inputs/Outputs
Events	SMS status

# **POWER**

Connector	4 pin industrial DC power socket
Input voltage range	9 – 30 VDC (4 pin industrial socket), reverse polarity protection, surge protection >33 VDC 10μ max
Power consumption < 5 W	

# PHYSICAL SPECIFICATIONS

Casing material	Aluminum housing	
Dimensions	64.4 x 74.5 x 25 mm (L x W x H)	
Weight	135 g	
Mounting options	Bottom and sideways DIN rail, Flat surface and direct PCB on DIN-Rail mounting options	



# PHYSICAL INTERFACES (PORTS, LEDS, ANNTENAS, BUTTONS, SIM)

RS232	RS232 interface, DB9 socket, 5 pin configuration with flow control	
I/Os	2 Inputs/Outputs pin on 4 pin power connector	
USB	Virtual network interface via USB	
Status LEDs	3 x connection type status LEDs, 5 x connection strength LEDs, 1x Power LED	
SIM	1 x SIM slot (Mini SIM – 2FF), 1.8 V/3 V	
Power	4 pin power connector with 2 x configurable Digital Inputs/Outputs	
Anntenas	1 x SMA for LTE	
Reset	Restore factory settings button	

# **OPERATING ENVIRONMENT**

Operating temperature	-40 °C to 75 °C	
Operating humidity	10 % to 90 % non-condensing	
Ingress Protection Rating	IP30	

# **REGULATORY & TYPE APPROVALS**

# **EMI**

Standards	Draft ETSI EN 301 489-1 V2.2.0, Draft EN 301 489-19 V2.1.0, Draft ETSI EN 301 489-52 V1.1.0	
ESD	EN 61000-4-2:2009	
RS	EN 61000-4-3:2006 + A1:2008 + A2:2010	
EFT	EN 61000-4-4:2012	
Surge protection	EN 61000-4-5:2014	
CS	EN 61000-4-6:2014	
DIP	EN 61000-4-11:2004	

# $\mathsf{RF}$

Standards	EN 300 511 V12.5.1. ETSI EN 301 908-1 V11.1.1. ETSI EN 301 908-2 V11.1.2. ETSI EN 301 908-13 V11.1.2


# SAFETY

	IEC 62368-1:2014(Second Edition), EN 62368-1:2014+A11:2017	
Standards	EN 50385:2017	
	EN 62232:2017	



# HARDWARE INSTALLATION

- 1. Unscrew two back panel hex bolts and remove the back panel.
- 2. Remove the back panel.
- 3. Insert your SIM card into the SIM socket.
- 4. Attach the panel and tighten the hex bolts.
- 5. Attach the mobile antenna (max torque 0.4 N·m / 3.5 lbf·in) and connect the USB cable.

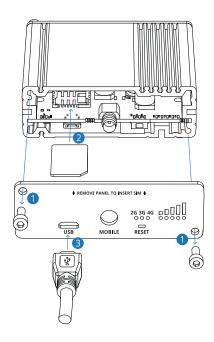

#### **LOGIN TO DEVICE**

- 1. Power on the device and connect the USB cable to your computer.
- 2. Allow the gateway to boot up. This might take up to 30 seconds.
- 3. Your computer's OS should detect the USB device and install the driver.
- 4. 4. To enter the gateway's Web interface (WebUI), type http://192.168.2.1 into the URL field of your Internet browser.
- 5. Use login information shown in image A when prompted for authentication.
- 6. After logging in pay attention to the Signal Strength indication displayed in the Mobile widget (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.





# **TECHNICAL INFORMATION**

	Radio specifications		
RF technologies	2G, 3G, 4G		
Max RF power 33 dBm@GSM, 24 dBm@WCDMA, 23 dBm@LTE			
	Bundled accessories specifications*		
Power adapter	Input: 0.4A@100-240VAC, Output: 9VDC, 0.5A, 4-pin plug		
Mobile antenna	698~960/1710~2690 MHz, 50 Ω, VSWR<2, gain** 2 dBi, omnidirectional, SMA male connector		

<sup>\*</sup>Order code dependent.
\*\*Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.



# WHAT'S IN THE BOX?

# STANDARD PACKAGE CONTAINS

- TRB142 board
- Euro PSU
- 1 x LTE antenna (magnetic mount, SMA male, 3 m cable)
- Micro-USB cable (0.8 m)
- 1 x hex key QSG (Quick Start Guide) Packaging box







# **STANDARD ORDER CODES**

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS
TRB142003000	851762	8517.62.00	Standard Package
TRB142000000	851762	8517.62.00	Standard Package, no housing

For more information on all available packaging options – please contact us directly.

# **AVAILABLE VERSIONS**

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
TRB142 0****	Europe, the Middle East, Africa, Korea, Thailand, India, Malaysia	<ul><li>4G (LTE-FDD): B1, B3, B7, B8, B20, B28A</li><li>3G: B1, B8</li><li>2G: B3, B8</li></ul>
TRB142 1*****	South America, Australia, New Zealand, Taiwan	<ul> <li>4G (LTE-FDD): B1, B2, B3, B4, B5, B7, B8, B28</li> <li>4G (LTE-TDD): B40</li> <li>3G: B1, B2, B5, B8</li> <li>2G: B2, B3, B5, B8</li> </ul>

The price and lead-times for region (operator) specific versions may vary. For more information please contact us.

<sup>1 -</sup> Versions for other regions are under development. 2 - For more detailed information, visit our Wiki



# **MOUNTING OPTIONS**

# **DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

• DIN Rail adapter



# **COMPACT DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	ABS + PC plastic
Weight	6.5 g
Screws included Philips Pan Head screw #6-32×3/16	
Dimensions 70 mm x 25 mm x 14,5 mm	
RoHS Compliant	V

For more information on all available packaging options – please contact us directly.

# **DIN RAIL KIT**

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	PRODUCT CODE	HS CODE	HTS CODE
088-00270	PR5MEC11	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.



Parameter	Value	
Mounting standard	Flat surface mount	
Material	ABS + PC plastic	
Weight	2x5 g	
Screws included	ncluded Philips Pan Head screw #6-32×3/16, 2pcs	
Dimensions	25 mm x 48 mm x 7.5 mm	
RoHS Compliant V		

# **DIN RAIL KIT**

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs



For more information on all available packaging options – please contact us directly.







# TRB142 SPATIAL MEASUREMENTS & WEIGHT


#### **MAIN MEASUREMENTS**

H x W x D dimensions for TRB142

Device housing\*: 64.4 x 74.5 x 25 Box: 173 x 148 x 71


#### **TOP VIEW**

The figure below depicts the measurements of TRB142 and its components as seen from the top:

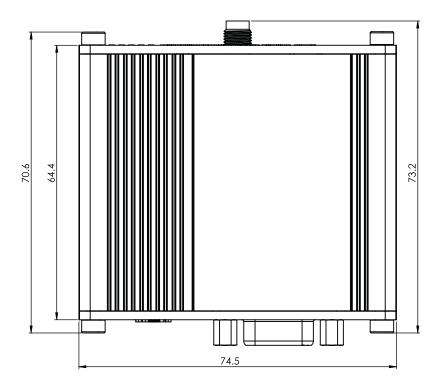

# **RIGHT VIEW**

The figure below depicts the measurements of TRB142 and its components as seen from the right side:  $\frac{1}{2} \left( \frac{1}{2} \right) = \frac{1}{2} \left( \frac{1}{2} \right) \left( \frac{1}$ 

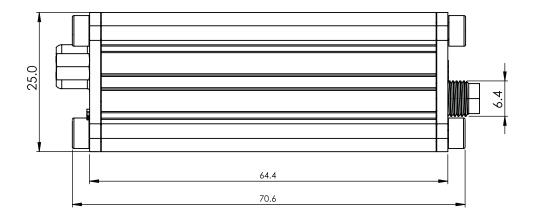


<sup>\*</sup>Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.




#### **FRONT VIEW**

The figure below depicts the measurements of TRB142 and its components as seen from the front:

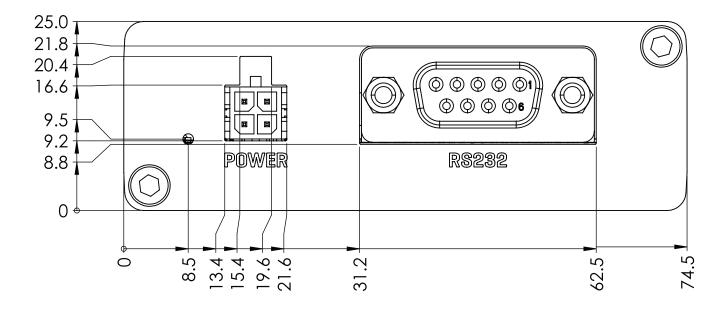

#### **REAR VIEW**


The figure below depicts the measurements of TRB142 and its components as seen from the back:

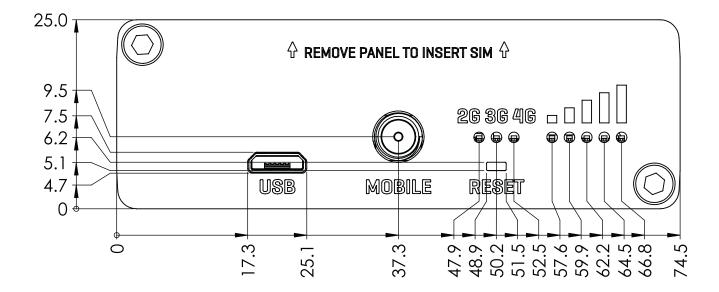



# MOUNTING SPACE REQUIREMENTS

The figure below depicts an approximation of the device's dimensions when cables and antennas are attached:

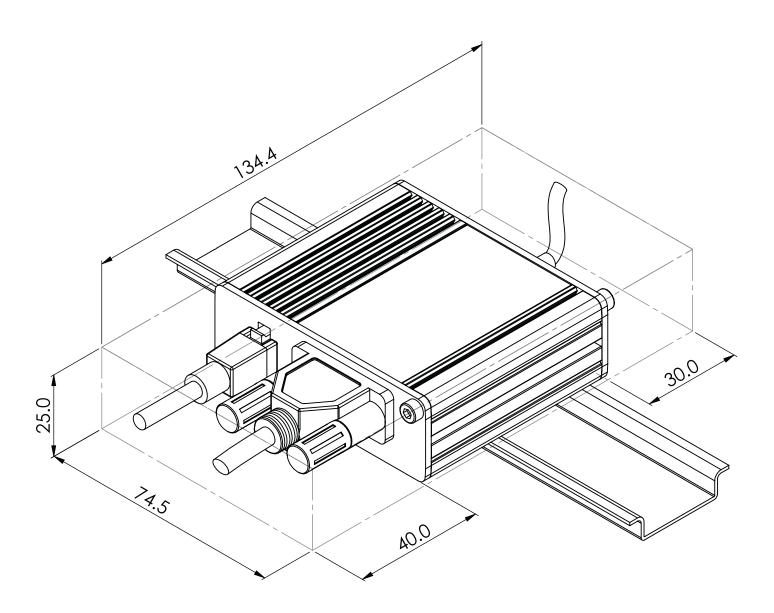



# DIN RAIL

The scheme below depicts protrusion measurements of an attached DIN Rail:

